


## Installation Instructions for

# SuperStation

**Model P-1550 For use with  
Series 9300/9500, 2115, 2313 and 2315 Operators**

 Proper installation will assure years of trouble-free operation  
**READ THE FOLLOWING INSTRUCTIONS THOROUGHLY  
BEFORE STARTING INSTALLATION**


Your SuperStation replaces a standard doorbell-type pushbutton to allow you to use all of the convenience and security features built into your door operator. The three function SuperStation has the following features.

**1. Door open/door close pushbutton:**

Used to start the door open or close. The function of this pushbutton is disabled when the Security slide switch is in the locked position.

**2. Operator light button:** Used to turn the operator lamp on or off when the door is stopped. When door operation is initiated, the built-in delay overrides the function of this button.

**3. Security/Vacation switch:** When in the locked position, prevents unwanted door operation from radio controls or key switches. Normal operation resumes when the switch in in the unlocked position.

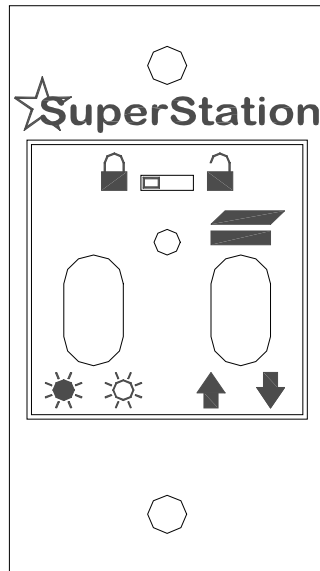

### **WARNING!**

Keep transmitters and remote controls out of the reach of children.  
Do not let children play with or use the transmitter or remote controls.

## Installing Your SuperStation

The SuperStation is an **optional accessory** and is designed to work with 9300, 9500, 2115, 2313 and 2315 door operators. Only connect one SuperStation to an operator. Only connect one operator to one SuperStation. Additional pushbuttons may be used with the SuperStation.

Connection to operators not listed above may cause damage to the operator and SuperStation.

When wiring the SuperStation, follow all local building codes and regulations and use approved wire. Follow the steps below for installation.

### WARNING!

Disconnect power before any installation or repair.


Follow all instructions provided by the




**STEP 1:** Determine a suitable location (usually near the access door) and at least 5 feet (1.5 meters) above the floor to prevent use by children. Use the SuperStation as a guide to mark the mounting holes. Drill holes for the mounting screw or wall anchors. NOTE: Do not mount directly to masonry walls. Use a backer board.

**STEP 2:** Run a length of 22 gage wire from the operator to the SuperStation. Support the wire as required with suitable staples. NOTE: Some building codes do not allow surface wiring.

**STEP 3:** Connect one wire to the PB and one wire to the COM terminals on the operator and the SuperStation, noting the wire colors. Connect the same colors to the same terminals on the operator and SuperStation. Check that no wires are allowed to touch any other terminal or any other conductive parts. Do not over-tighten the terminal screws.

**STEP 4:** Reconnect power to the operator and test the SuperStation as described above.

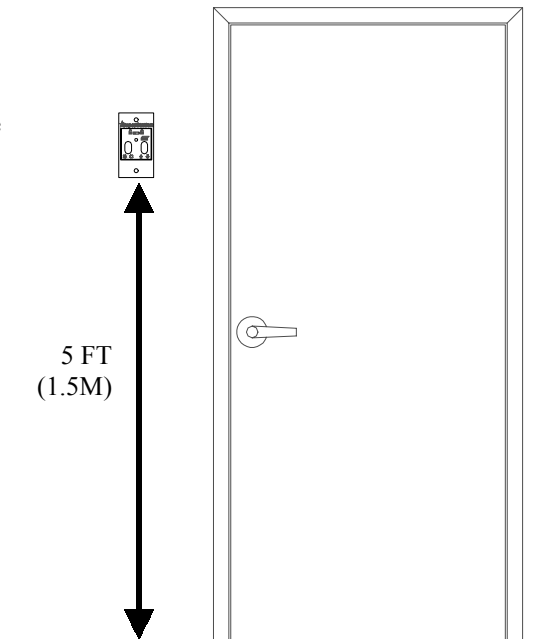

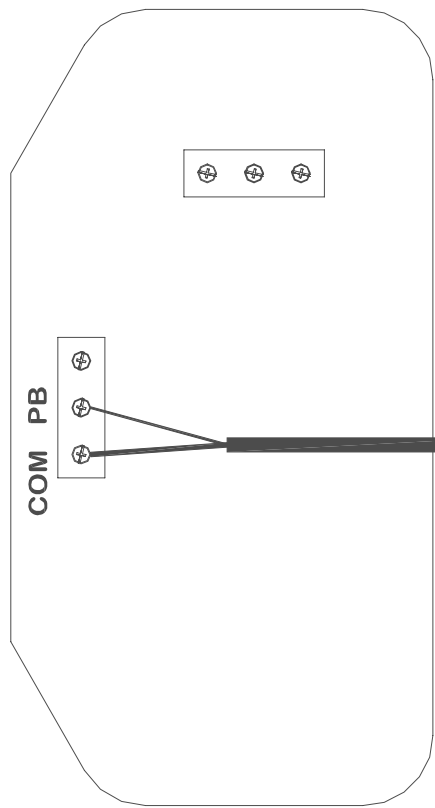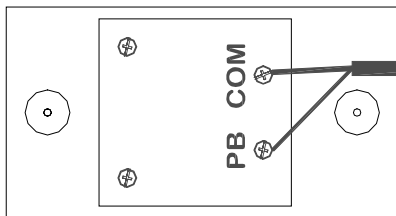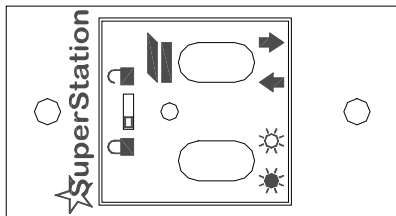

## Operational Check

After installing the SuperStation the operator should function as described above. If you experience problems, refer to the trouble shooting steps below.

- If the door does not operate, make sure the security/vacation switch is in the unlocked position.
- If the SuperStation doesn't activate the operator check the wiring connections on both the SuperStation and the operator. The connections are polarized.
- If you are still having problems after checking the wire connections, remove the wires on the operator and test the operator with the radio controls only.
- Make sure there are no breaks or staple damage to the wire connecting the SuperStation to the operator..
- Make sure the ends of the wires are not touching adjacent terminals or conductive components..
- If you have multiple pushbuttons or additional controls connected to the operator, remove them and reattach one-at-a-time. Check for proper operation after each device is connected.

### Manufacturer's Limited Warranty

Allstar warrants its SuperStation to be free from defect in material and workmanship for a period of one (1) year from the date of purchase. To obtain service, contact your dealer.

To obtain service under this warranty the buyer must obtain authorization instructions for the return of any goods from Allstar before returning the goods. The goods must be returned with complete identification, with copy of proof-of-purchase, freight prepaid and in accordance with Allstar's instructions or they will not be accepted. In no event will Allstar be responsible for goods returned without proper authorization or identification.

Goods returned to Allstar for warranty repair within the warranty period, which upon receipt by Allstar are confirmed to be defective and covered by this limited warranty, will be repaired or replaced at Allstar's sole option, at no cost and returned pre-paid. Defective parts will be repaired or replaced with new or factory rebuilt parts at Allstar's sole option.

This limited warranty does not cover non-defect damage, damage caused by unreasonable use, damage caused by improper installation or care, vandalism or lightning, fire or excessive heat, flood or other acts of God (including, but not limited to misuse, abuse or alterations, failure to provide reasonable and necessary maintenance), labor charges for dismantling or reinstalling a repaired or replaced unit, or replacement batteries.

These warranties are in lieu of all other warranties, either expressed or implied. All implied warranties of merchantability and/or fitness for a particular purpose are hereby disclaimed and excluded. Under no circumstances shall Allstar be liable for consequential, incidental or special damages arising in connection with the use or inability to use this product. In no event shall Allstar's liability for breach of warranty, breach of contract, negligence or strict liability exceed the cost of the product covered hereby. No person is authorized to assume for Allstar any other liability in connection with the sale of this product.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Warranty effective after July 1, 1999.